

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Scanners > WWR2900/2905 > 2905 WandReader :
How do I keep my Wandreader scanner from sending an 'Enter' after each scan?

2905 WandReader : How do I keep my Wandreader scanner from sending an 'Enter' after each scan?

Internal User - 2017-04-10 - in WWR2900/2905

In the Terminator section on page 12 of the Programming Guide, scan the barcode for None.