

Portal > Knowledgebase > Hardware > Printers > WCD5000 Cash Drawer: printer driver settings to open cash drawer at print

## WCD5000 Cash Drawer: printer driver settings to open cash drawer at print

Scott Leonard - 2017-04-10 - in Printers

Most POS software has the code built-in if the correct printer is chosen. The printer uses the industry standard code for the Epson TM88\_II model.

If needed, here are driver settings with code that will open the Wasp cash drawer at the end of every print job:

Right-click the receipt printer, Printer Properties (or just Properties in Windows XP)

On the Printer commands tab, enter this in the End Print Job field: <1D>V<011B>p<00191E>

Click Apply.

Test by clicking Print Test Page on the General Tab.

General	Text Only F	Por		Advance	ed ]	? Security
Device S			Commands	and the second se	Contraction of the second	election
Begin Print	<u>J</u> ob	<b></b>				
End Print Job		<1D>V<011B>p<00191E>				
Paper <u>S</u> ize	Select	<b>_</b>				
Paper <u>F</u> eed	d Selection					
Unprintat	ole Margins					
Left	0		)	Units	0.01 jncł	
		Bottom		(7)(544)	0.0 r inici 0.1 <u>m</u> illim	
חושרונ					1.000	