

# Wasp

## BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Scanners > WDI4500 > WDI4500: How to enable reading inverse/negative barcodes

---

### WDI4500: How to enable reading inverse/negative barcodes

Scott Leonard - 2017-09-06 - in WDI4500

There are several User Manual pages with configuration barcodes related to scanning inverse/negative barcodes for the WDI4500 scanner:

1D barcodes: Page 5-59 (PDF page 129)

Data Matrix: Page 5-74 (PDF page 144)

QR Code: Page 5-77 (PDF page 147)

Aztec: Page 5-79 (PDF page 149)

---

#### Related Pages

- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)