



WASP PROTECT

Portal > Knowledgebase > Hardware > WWS450 scanner: Determine the serial number and firmware version

WWS450 scanner: Determine the serial number and firmware version

Scott Barnett - 2017-05-12 - in Hardware

The List Setting configuration barcodes are in section 2.4.3 List the Current Settings, on printed pages 27-29 (PDF pages 39-41) of the User Manual.

Procedure for outputting this information:

1. Launch a program such as Notepad or MS Word to receive the information from the scanner.
2. Scan Enter Setup (bottom of odd-numbered pages).
3. Scan the List Page x configuration barcode. The data is sent immediately. Do not click out of your program from step 1, until all the data is transmitted.
4. Scan Update (bottom of even-numbered pages). If this step is omitted, the scanner is still in Setup mode.

An example list page is below. The serial number is near the end of List Page 1; Ver is the firmware version.

Parameter Listing (Page 1)

KV-1.00

Ver:1.12

=====

Interface Parameters

Interface Type : Remote USB HID (PCAT - US Keyboard)
Capital Lock OFF, Alphabets Case Sensitive,
Send Digits Using AlphaNumeric Key Pad, Digit Position - Normal
KBD Layout - Normal, Shift/Capital Lock - Normal
Special Keyboard Feature : Apply Kanji Transmission : Disable
HID Character Transmit Mode : Batch Processing
Inter-Function Delay : 0 ms Inter-Character Delay : 0 ms
Authentication : Disable PIN : 0000
Broadcast Device Name : Enable Sniff Mode : Enable
Simple Pairing : Disable

Buzzer Parameters

Frequency : 4 KHz Duration : Shortest
Volume : Maximum

Scanner Parameters

Scan Mode : Laser Mode Scanner Time-out : 10 Sec
Negative Barcode : Disable Reading Redundancy : No
Re-read Delay : 400 ms NO READ Support : Disable
Good Read LED : Enable Good Read LED On Duration :
40 ms
Memory Scanner : Disable Memory Data Delay : None
Auto Power Off : 10 Min Power Saving Duration : 2 Min
Transmit Buffer : Enable Picklist Mode : Disable
Low Battery Alarm : Enable Serial Number : BH1000857
Auto Power Off Ignore ScanMode: Disable
AIM Code ID: Disable
Scan Engine Revision : PAAAAC05-001-R00

Related Pages

-
- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)