



[Knowledgebase](#) > [Hardware](#) > [Scanners](#) > [WWR2900/2905](#) > [2905 WandReader : How do I keep my Wandreader scanner from sending an 'Enter' after each scan?](#)

2905 WandReader : How do I keep my Wandreader scanner from sending an 'Enter' after each scan?

Internal User - 2017-04-10 - [WWR2900/2905](#)

In the Terminator section on page 12 of the Programming Guide, scan the barcode for None.