



BARCODE TECHNOLOGIES

[Knowledgebase](#) > [Hardware](#) > [Printers](#) > [600 Thermal Printer: How to: How do I set up the W-600 and Wasp Labeler using Windows 2000 or XP?](#)

600 Thermal Printer: How to: How do I set up the W-600 and Wasp Labeler using Windows 2000 or XP?

Internal User - 2017-04-10 - [Printers](#)

1. Make sure the media and ribbon are loaded correctly. See pgs 4-9 of the W-600 User's Guide.
2. Calibrate the W-600 printer. See page 10 of the W-600 User's Guide.
3. Make sure that the printer driver is loaded correctly. See page 13 of the W-600 User's Guide.
4. Set the paper size in the W-600 printer driver. If your paper size does not appear in the list, right click anywhere in the printers folder and select "Server Properties" and then select "Create a new form". Fill in the dimensions and then name and save the form. This paper size will now appear for all printers.
5. Select the page size in the Wasp Labeler. Click on the "File" menu and then click "Page Setup". In the page setup screen, select the correct page size. If the correct page size is not listed, click the "New" button and create the proper page size.
6. Print the Windows Test Page from the printer driver. Do this by right clicking on the printer in the Control Panel and selecting "Properties" and then clicking on "Print Test Page".
7. Create your label in the Wasp Labeler software.
8. Click on File then Print preview.
9. If the label looks correct on the screen click the print button.
10. If the label looks incorrect double check the page settings in the driver and in the Wasp Labeler software and try again.