



BARCODE TECHNOLOGIES

[Knowledgebase](#) > [Hardware](#) > [Printers](#) > [606 Thermal Printer - Error: On the display I see Ready, but after calibrating I get an error light.](#)

606 Thermal Printer - Error: On the display I see Ready, but after calibrating I get an error light.

Internal User - 2017-04-10 - [Printers](#)

1. Reset and 2. re-calibrate your printer:

1. Reset

Turn the printer OFF

Press and hold the PAUSE & FEED buttons

Turn the printer ON while holding the PAUSE & FEED buttons

When the printer is ON the ON LINE & ERROR LIGHTS are lit (this is probably what you have)

Release the PAUSE & FEED buttons

Turn the printer OFF again

go to step 2. re-calibrate

2. re-calibrate

· Turn the printer OFF

· Press and hold the PAUSE button

· Turn the printer ON while holding the PAUSE button

· When the printer reads "GAP/BLINE sensor calibrating..." you can release the PAUSE button

The printer will feed some labels

· Once the calibration is done, turn the printer OFF

· Turn the printer ON and you should be ready to print