

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Scanners > WCS3900/3905/3950 > How do I enable Inverse or Negative barcode reading on the WCS3900 or WLR8900 scanners?

How do I enable Inverse or Negative barcode reading on the WCS3900 or WLR8900 scanners?

Internal User - 2023-01-19 - in WCS3900/3905/3950

This works for the WCS3900 or WLR8900, but will not work on the WWR2900 Wand Reader.

To enable Inverse or Negative barcode reading (white bars on a black background):

Download and print this file:

<https://dl.waspbarcode.com/kb/scanner/inversebarcodes.pdf>

Scan the Enable Negative Labels barcode.