

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Scanners > I am trying to read barcodes with my CCD scanner, but it will not scan. I am holding the scanner 6-8 inches from the barcode.

I am trying to read barcodes with my CCD scanner, but it will not scan. I am holding the scanner 6-8 inches from the barcode.

Internal User - 2017-04-10 - in Scanners

N1181, UF101, and the 390x CCD scanners are contact scanners, they must be physically touched to the barcode you are scanning. The Wasp CCD LR (890x) (long range) scanner is an exception - it can be held 12 to 15 inches away from the barcode, depending on the barcode's density and size.