

## WCD5000 Cash Drawer: printer driver settings to open cash drawer at print

Scott Leonard - 2025-01-07 - [Printers](#)

Most POS software has the code built-in if the correct printer is chosen. The printer uses the industry standard code for the Epson TM88\_II model.

If needed, here are driver settings with code that will open the Wasp cash drawer at the end of every print job:

Right-click the receipt printer, Printer Properties (or just Properties in Windows XP)

On the Printer commands tab, enter this in the End Print Job field:

```
<1D>V<011B>p<00191E>
```

Click Apply.

Test by clicking Print Test Page on the General Tab.

