

Wasp

BARCODE TECHNOLOGIES

[Portal](#) > [Knowledgebase](#) > [Hardware](#) > [Printers](#) > [WCD5000 Cash Drawer: printer driver settings to open cash drawer at print](#)

WCD5000 Cash Drawer: printer driver settings to open cash drawer at print

Scott Leonard - 2017-04-10 - in [Printers](#)

Most POS software has the code built-in if the correct printer is chosen. The printer uses the industry standard code for the Epson TM88_II model.

If needed, here are driver settings with code that will open the Wasp cash drawer at the end of every print job:

Right-click the receipt printer, Printer Properties (or just Properties in Windows XP)

On the Printer commands tab, enter this in the End Print Job field:

```
<1D>V<011B>p<00191E>
```

Click Apply.

Test by clicking Print Test Page on the General Tab.

