



# WASP PROTECT

[Portal](#) > [Knowledgebase](#) > [Hardware](#) > [Printers](#) > [WCD5000 Cash Drawer: printer driver settings to open cash drawer at print](#)

---

## WCD5000 Cash Drawer: printer driver settings to open cash drawer at print

Scott Barnett - 2017-04-10 - in [Printers](#)

Most POS software has the code built-in if the correct printer is chosen. The printer uses the industry standard code for the Epson TM88\_II model.

If needed, here are driver settings with code that will open the Wasp cash drawer at the end of every print job:

Right-click the receipt printer, Printer Properties (or just Properties in Windows XP)

On the Printer commands tab, enter this in the End Print Job field:

```
<1D>V<011B>p<00191E>
```

Click Apply.

Test by clicking Print Test Page on the General Tab.

**Generic / Text Only Properties** [?] [X]

General | Sharing | Ports | Advanced | Security

Device Settings | Printer Commands | Font Selection

Begin Print Job

End Print Job

Paper Size Select

Paper Feed Selection

Unprintable Margins

Left	<input type="text" value="0"/>	Top	<input type="text" value="0"/>	Units <input type="radio"/> 0.01 inches <input checked="" type="radio"/> 0.1 millimeters
Right	<input type="text" value="0"/>	Bottom	<input type="text" value="0"/>	

OK Cancel Apply