



[Knowledgebase](#) > [Hardware](#) > [WCD5000 cash drawer: replacing the lock](#)

WCD5000 cash drawer: replacing the lock

Scott Leonard - 2023-01-20 - [Hardware](#)

To replace the lock in the WCD5000 cash drawer, open the drawer, remove the plastic insert that holds the money, then follow the instructions and pictures in the linked PDF document. You will need pliers.

<https://dl.waspbarcode.com/wasp/supportfiles/kbimages/cashdrawer/wcd5000-cash-drawer-lock-replacement.pdf>