



WASP PROTECT

Portal > Knowledgebase > Hardware > WCD5000 cash drawer: replacing the lock

WCD5000 cash drawer: replacing the lock

Scott Barnett - 2018-06-13 - in Hardware

To replace the lock in the WCD5000 cash drawer, open the drawer, remove the plastic insert that holds the money, then follow the instructions and pictures in the linked PDF document. You will need pliers.

<http://dl.waspbarcode.com/wasp/supportfiles/kbimages/cashdrawer/wcd5000-cash-drawer-lock-replacement.pdf>