

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Scanners > WCS3900/3905/3950 > WCS3900 - How do I stop my WCS3900 or WCS3905 scanner from pressing "Enter" after every scan?

WCS3900 - How do I stop my WCS3900 or WCS3905 scanner from pressing "Enter" after every scan?

Internal User - 2017-05-12 - in WCS3900/3905/3950

WCS3900 and WCS3905 scanners

In the user manual, page 13, scan the barcode that reads "None". This will set the terminator to nothing instead of carriage return (Enter).

Related Pages

- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)