



[Knowledgebase](#) > [Hardware](#) > [Scanners](#) > [WDI4500](#) > [WDI4500: How to enable reading inverse/negative barcodes](#)

WDI4500: How to enable reading inverse/negative barcodes

Scott Leonard - 2017-09-06 - [WDI4500](#)

There are several User Manual pages with configuration barcodes related to scanning inverse/negative barcodes for the WDI4500 scanner:

1D barcodes: Page 5-59 (PDF page 129)
Data Matrix: Page 5-74 (PDF page 144)
QR Code: Page 5-77 (PDF page 147)
Aztec: Page 5-79 (PDF page 149)

Related Content

- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)