

Wasp

BARCODE TECHNOLOGIES

[Portal](#) > [Knowledgebase](#) > [Hardware](#) > [Scanners](#) > [WDI4600](#) > [WDI4600 Stand Mode](#)

WDI4600 Stand Mode

Scott Leonard - 2018-02-26 - in [WDI4600](#)

WDI4600 Stand Mode-related pages:

pp 65-70

pp 228-229

pp 75-76

To enable Stand Mode, scan these:

pg 65: Enter/Exit Programming Mode

pg 65: Scan Mode = Stand Mode

pg 66: Stand Mode Indication = Enable (useful but not required)

pg 75: Corded Stand Mode = Generic Stand

pg 75: Enter/Exit Programming Mode

See Related Pages below for the User Manuals (Product Reference Guide and Quick

Reference Guide).

Related Pages

- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)