

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Mobile Computers > WDT60: Disabling and Enabling the Wifi card

WDT60: Disabling and Enabling the Wifi card

Scott Leonard - 2017-04-10 - in Mobile Computers

Disabling and Enabling the Wifi card on a WDT60:

At the top of the screen, tap the antenna icon. Tap the phone oval with signal bars.

In the next screen, tap the Wireless Manager text link.

Tap the Wifi button to cycle status: Off, Available/On/Network card (switches automatically).

Note: When Wifi is set to Off, the Summit Client Utility will show Status: Externally Disabled.

If the WDT60 is plugged into the PC, it might disable the wifi.

Related Pages

- [Mobile Device User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\)](#)
- [WDT90: How to disable and enable wifi card \(Summit status is Externally Disabled\)](#)
- [WDT60: Network configuration to enable name resolution and/or internet browsing](#)
- [Summit Client Utility: How to set up wireless, and choose from multiple SSIDs \(wireless networks\)](#)
- [Windows Mobile device reports that the wireless status is "Externally Disabled"](#)