

# Wasp

## BARCODE TECHNOLOGIES

[Portal](#) > [Knowledgebase](#) > [Hardware](#) > [POS Equipment](#) > [WMR1200 - Error: Not decoding properly. I'm seeing lots of unprintable ASCII characters when I swipe a card](#)

---

### WMR1200 - Error: Not decoding properly. I'm seeing lots of unprintable ASCII characters when I swipe a card

Jason Whitmer - 2017-04-10 - in [POS Equipment](#)

Check the DIP switches on the underside to make sure they are set as follows:

If your PC has a PS/2 style keyboard port (about the diameter of a pencil):

SW2 and SW8 should be set to "OFF"

All the other switches should be set to "ON"

(These are the factory default settings.)

If your PC has a PC/AT style keyboard port (about the diameter of a dime):

SW2, SW4 and SW8 should be set to "OFF"

All the other switches should be set to "ON"

At this writing, the instructions given for Switch 4 on page 6 of the WMR-1200 User's Guide are incorrect. Follow the instructions above, instead.