

Wasp

BARCODE TECHNOLOGIES

Portal > Knowledgebase > Discontinued Products > Hardware > WPA206 - Error: My PC / ActiveSync does not respond when I connect my WPA-206

WPA206 - Error: My PC / ActiveSync does not respond when I connect my WPA-206

Internal User - 2017-04-10 - in Hardware

MultiBay may be running on the handheld.

Look in the center of the menu bar (with the time) on the bottom of the screen.

Look for a small icon showing two screens with a connecting cord.

Tap this icon.

Tap *Exit*.

Tap Yes when prompted to exit *MultiBay*

Disconnect, then reconnect your handheld. *ActiveSync* should reconnect the device.