

# Wasp

## BARCODE TECHNOLOGIES

Portal > Knowledgebase > Hardware > Printers > WPL305 - How do you change the WPL 305 printer's settings when switching from direct thermal to thermal transfer ( DT / TT ) or vice-versa?

---

### WPL305 - How do you change the WPL 305 printer's settings when switching from direct thermal to thermal transfer ( DT / TT ) or vice-versa?

Internal User - 2017-04-13 - in Printers

Reset and calibrate the printer as described in the user manual.

This switches modes on the 305 printer and you should now be able to print normally.