



[Knowledgebase](#) > [Hardware](#) > [Printers](#) > [WPL305 - How do you change the WPL 305 printer's settings when switching from direct thermal to thermal transfer \(DT / TT \) or vice-versa?](#)

WPL305 - How do you change the WPL 305 printer's settings when switching from direct thermal to thermal transfer (DT / TT) or vice-versa?

Internal User - 2017-04-13 - [Printers](#)

Reset and calibrate the printer as described in the user manual.

This switches modes on the 305 printer and you should now be able to print normally.