

# Wasp

## BARCODE TECHNOLOGIES

[Portal](#) > [Knowledgebase](#) > [Hardware](#) > [Scanners](#) > [WWS800/850](#) > [WWS800/850:  
Adjusting Inter-Character Delay \(only with base station\)](#)

---

### WWS800/850: Adjusting Inter-Character Delay (only with base station)

Scott Leonard - 2017-05-12 - in WWS800/850

Page numbers are from the Reference Guide (manual with configuration barcodes).

1. Page 8: Enter Setup (same on any even numbered page)
2. Page 8: Inter-Character Delay
3. Page 53: Scan barcodes for the digits of the delay you want, in milliseconds, from 0 to 255, then Validate. The suggested starting time is 10, then increasing that number if you still encounter problems. For 10, you would scan 1, then 0, then Validate.
4. Page 53: Update (same on any odd numbered page)

[Related Pages](#)

---

- [Scanner User Manuals, Programming Reference Guides, Quick Reference Guides, Quick Start Guides \(multiple models\) manual](#)
- [WWS800/850: Characters out of order when connected with Bluetooth](#)